


Electric Brake System Resistor No. 1100-41

Installation & Operating Instructions

P-1376 819-0089

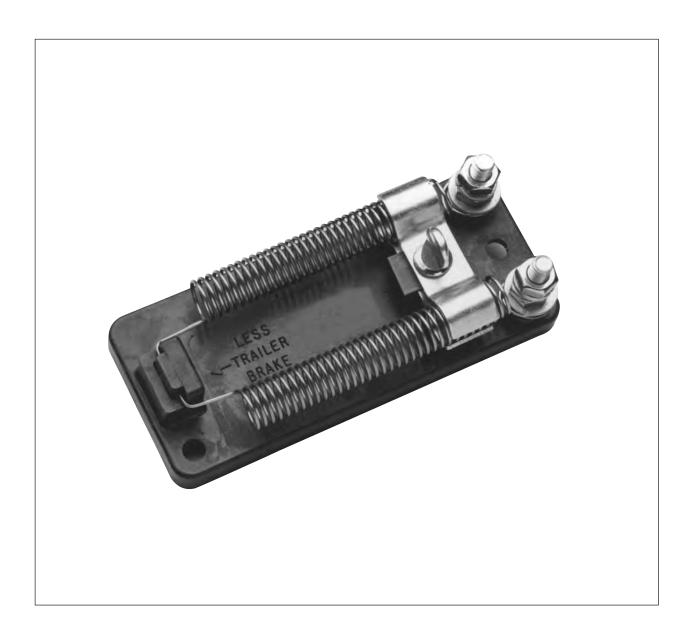




An Altra Industrial Motion Company

INDUSTRIAL TIAL MEX (55) 53 63 23 31 MTY (81) 83 54 10 18 DIST. AUTORIZADO QRO (442) 1 95 72 60 ventas@industrialmagza.com


AWARNING Failure to follow these instructions may result in product damage, equipment damage, and serious or fatal injury to personnel.

Parts Included in Kit

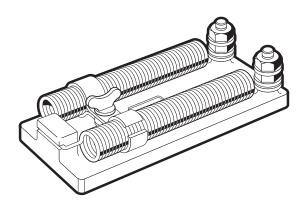


System Resistor 1100-41


Typical Installation

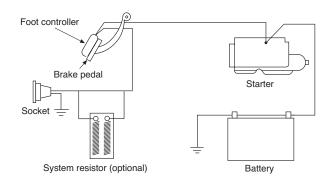


Installation & Operation Instructions for Warner Electric Brake System Resistor

  - The purpose of the System resistor is to allow synchronization of trailer brakes with the towing vehicle's brakes. When properly adjusted each brake system should do its own share of work. The towing vehicle should not be stopping the trailer and the trailer should not be stopping the towing vehicle.
- Select a suitable area in the engine compartment. Mark the location for mounting screws and drill (2) 3/16" holes. Position the resistor and insert and tighten the two screws to secure the unit in place.
- 3. Connect the resistor in series with the brake control and power supply per the diagram.
- 4. Be careful when routing wires around hot or sharp surfaces. Clamp wires to prevent chaffing. A grounded or shorted wire would make trailer brakes inoperable and could cause damage to other wiring.
- 5. To increase braking power, loosen the thumb screw and move slide toward "more trailer brake". To decrease braking power, move the slide toward "less trailer brake".

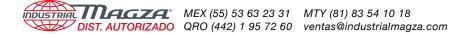

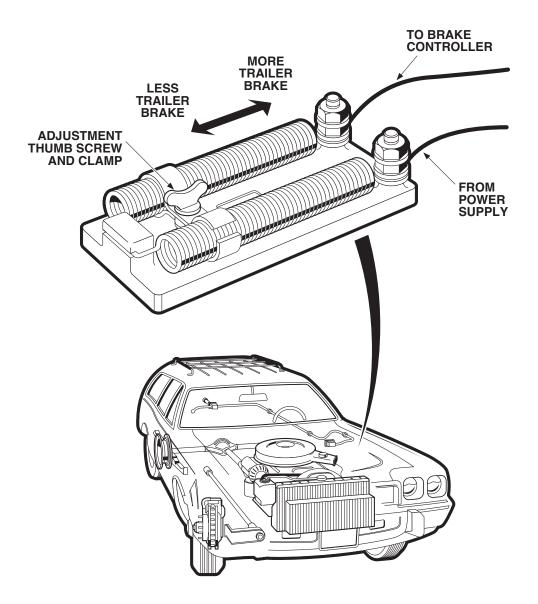

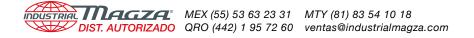

Warranty

Warner Electric LLC warrants that it will repair or replace (whichever it deems advisable) any product manufactured and sold by it which proves to be defective in material or workmanship within a period of one (1) year from the date of original purchase for consumer, commercial or industrial use.

This warranty extends only to the original purchaser and is not transferable or assignable without Warner Electric LLC's prior consent.

Warranty service can be obtained in the U.S.A. by returning any defective product, transportation charges prepaid, to the appropriate Warner Electric LLC factory. Additional warranty information may be obtained by writing the Customer Satisfaction Department, Warner Electric LLC, 449 Gardner Street, South Beloit, Illinois 61080, or by calling 815-389-3771.

A purchase receipt or other proof of original purchase will be required before warranty service is rendered. If found defective under the terms of this warranty, repair or replacement will be made, without charge, together with a refund for transportation costs. If found not to be defective, you will be notified and, with your consent, the item will be repaired or replaced and returned to you at your expense.

This warranty covers normal use and does not cover damage or defect which results from alteration, accident, neglect, or improper installation, operation, or maintenance.

Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Warner Electric LLC's obligation under this warranty is limited to the repair or replacement of the defective product and in no event shall Warner Electric LLC be liable for consequential, indirect, or incidental damages of any kind incurred by reason of the manufacture, sale or use of any defective product. Warner Electric LLC neither assumes nor authorizes any other person to give any other warranty or to assume any other obligation or liability on its behalf.

WITH RESPECT TO CONSUMER USE OF THE PRODUCT, ANY IMPLIED WARRANTIES WHICH THE CONSUMER MAY HAVE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. WITH RESPECT TO COMMERCIAL AND INDUSTRIAL USES OF THE PRODUCT, THE FOREGOING WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Changes in Dimensions and Specifications

All dimensions and specifications shown in Warner Electric catalogs are subject to change without notice. Weights do not include weight of boxing for shipment. Certified prints will be furnished without charge on request to Warner Electric.



Warner Electric LLC 449 Gardner Street • South Beloit, IL 61080 815-389-3771 • Fax: 815-389-2582 www.warnerelectric.com An Altra Industrial Motion Company